



Service / Workshop Manual

Wiring Connector location diagrams

Downloaded free from the TVRCC website, not to be sold for commercial gain.

FRONT HARNESS CONNECTORS

J1 Bonnet Switch

Location: Top of the passenger footwell.
Connection: 2 way

J2:A +B Brake Light Switch


Location: Switch on back of brake pedal
Connection: Spade connectors

J3 Cigarette Lighter

Location: Behind cigarette panel
Connection: 3 way

J4 Column Pod Harness

Location: Above the column harness
Connection: 2 way

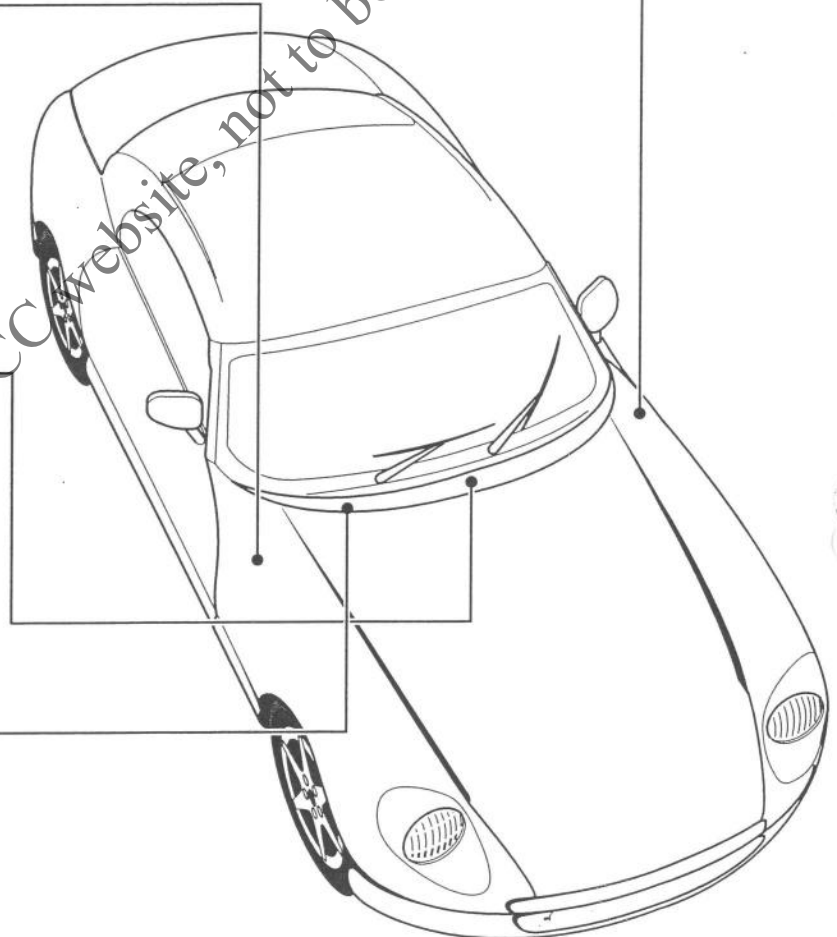

J5 Courtesy Light Switch

Location: Bottom of passenger
A post

Connection: 3 way

J6 Dash Switches Interface Unit

Location: Behind dash panel

Connection: 9 way

J7 Dashboard Instrument Pod Connector


Location: Above the steering
column

Connection: 9 way

J8+9 Driver's Door Connector

Location: Under door hinge
recess

Connection: 1 x12, 1x3 way

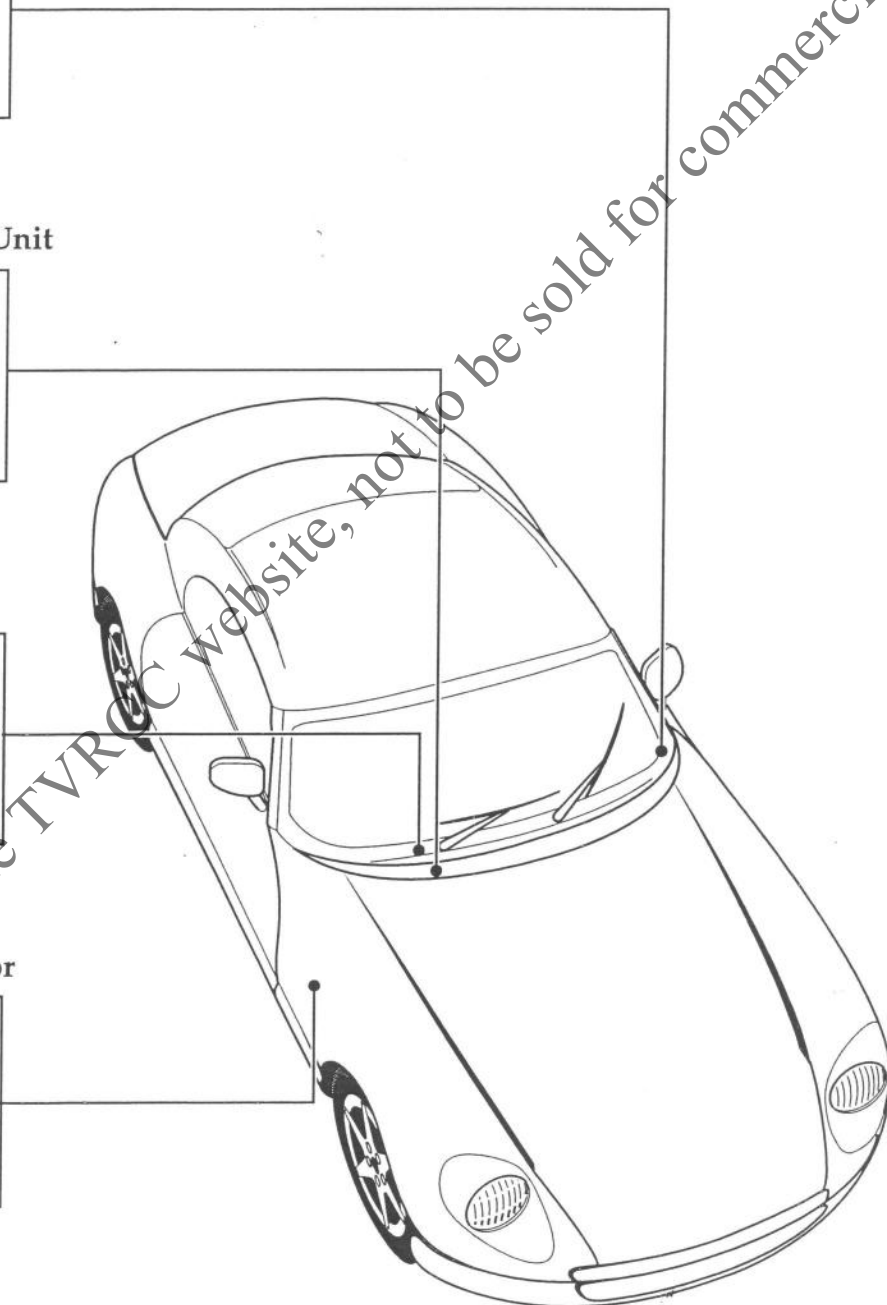

J10 Engine Harness Connector

Location: Push back of passenger footwell

Connection: 19 way

J11:A+B Hand Brake Switch

Location: Mirco Switch under handbrake

Connection: spades

J12 Heater Box (Heated Air)


Location: Drivers footwell

Connection:

J13 Heater Box (Fresh Air and A/Con)

Location: Passenger footwell

Connection:

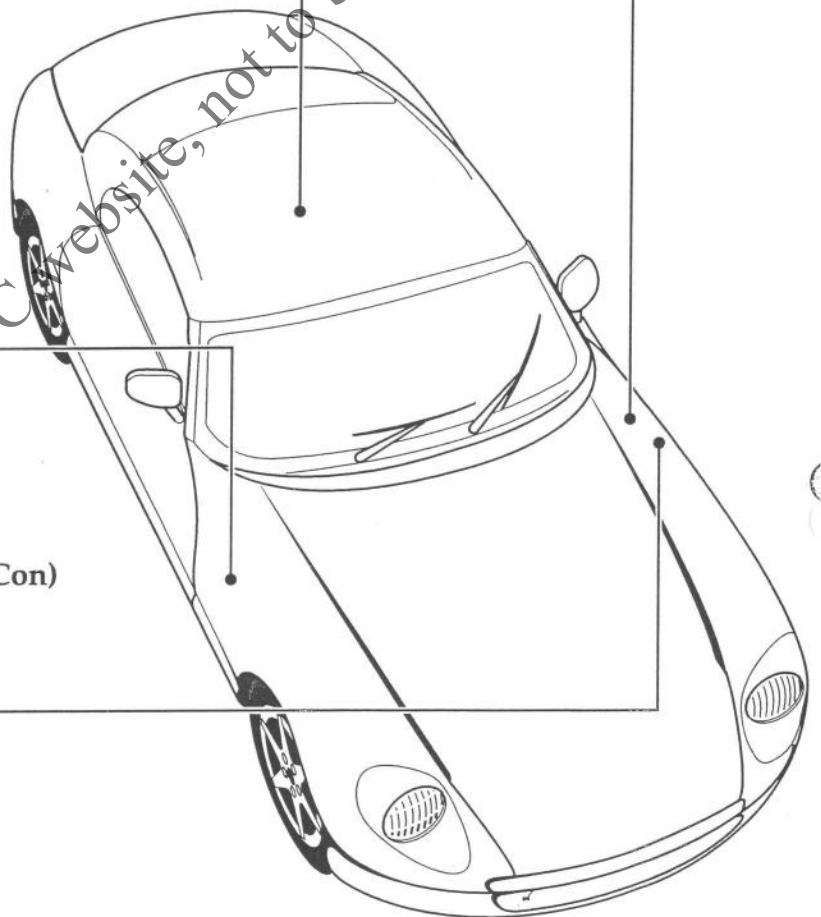

J14+15 Heater Control Unit

Location: Pushed to back of passenger footwell

Connection: 2 x 17 way

J16 Ignition Switch

Location: Behind centre panel

Connection: 2 way

J17 Inner Lock Button


Location: Behind centre panel

Connection: 6 way

J18 +19 Passenger Door Connectors

Location: Under hinge recess

Connection: 2 spades connectors

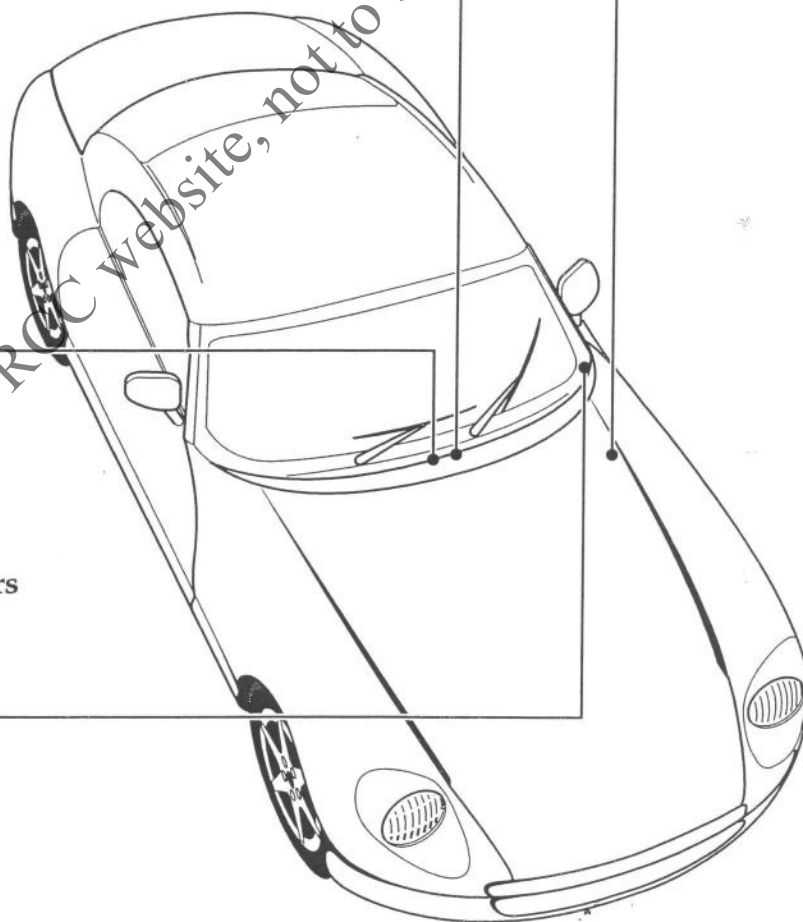

J20 Low Brake Fluid Switch

Location: On top of brake fluid reservoir

Connection: 3 way

J21 Nose Connector

Location: Top of Passenger footwell

Connection: 19 way

J22+23 Radio


Location: Behind Radio

Connection: 2 x 8 way

J24 Reverse Light Switch

Location: Micro switch on gearbox

Connection: 2 way sealed

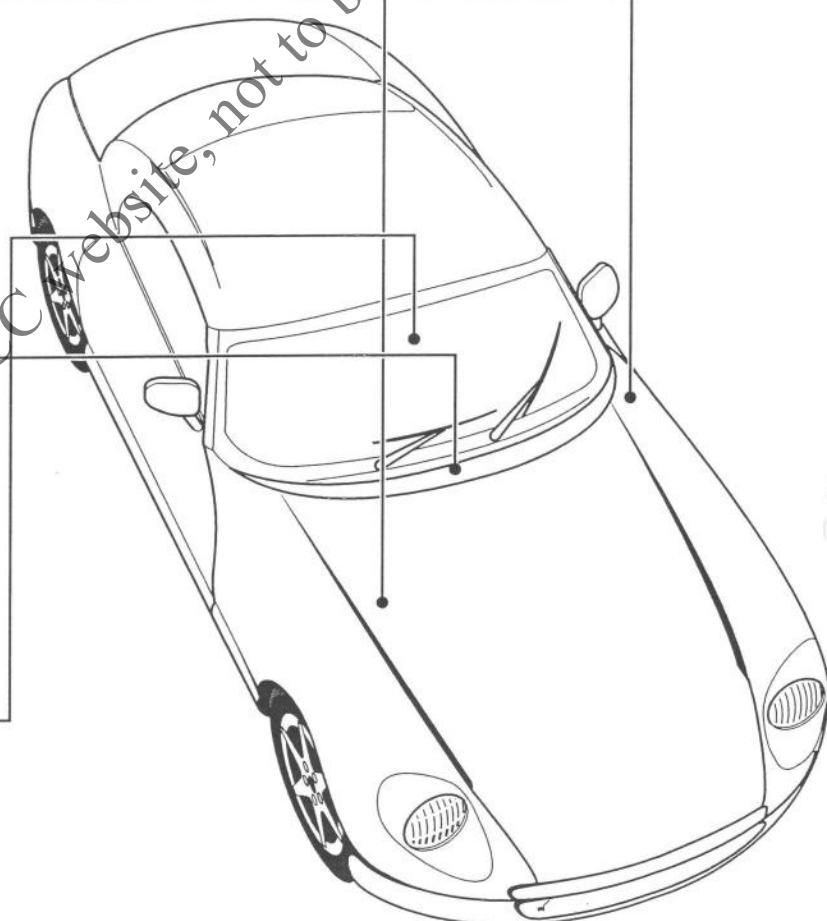

J25 Steering Wheel Control Unit

Location: Top of column mount

Connection: 17 way + 5 way
+ 5 ribbon way

J26 Window Switch Connectors

Location: Either side of radio

Connection: 2 x 6 way

J27 Passenger's Window Switch


Location: Either side of radio

Connection: 6 way

J28 Wiper Control Unit Connector

Location: Back of passenger footwell


Connection: 17 way

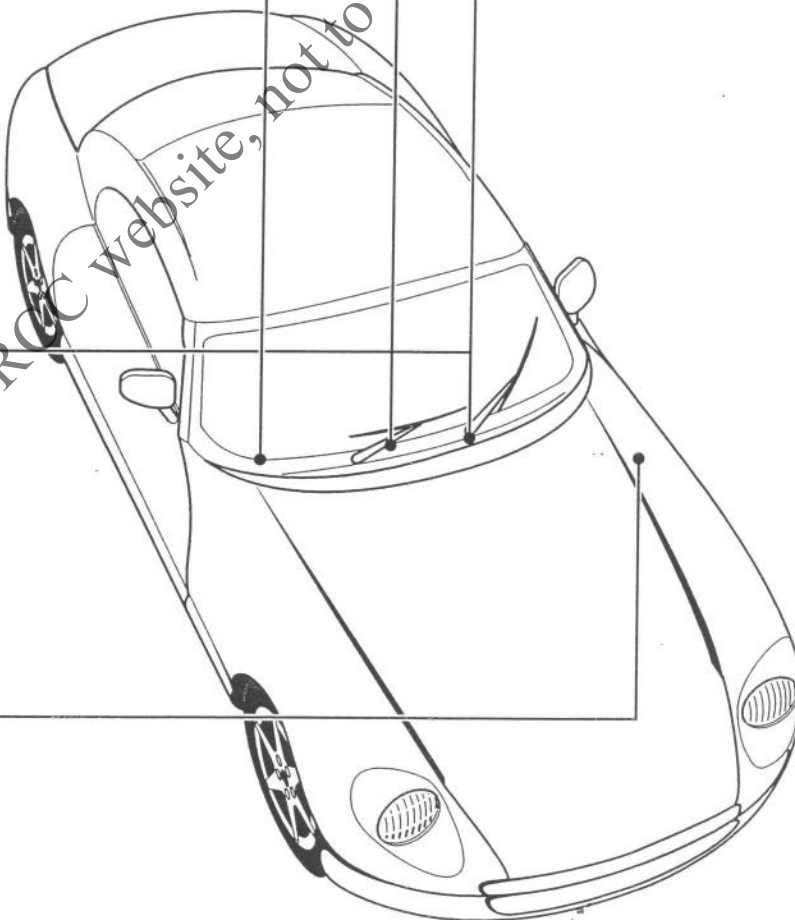

J28 Wiper Motor Connector

Location: Engine Bay

Connection: 5 way

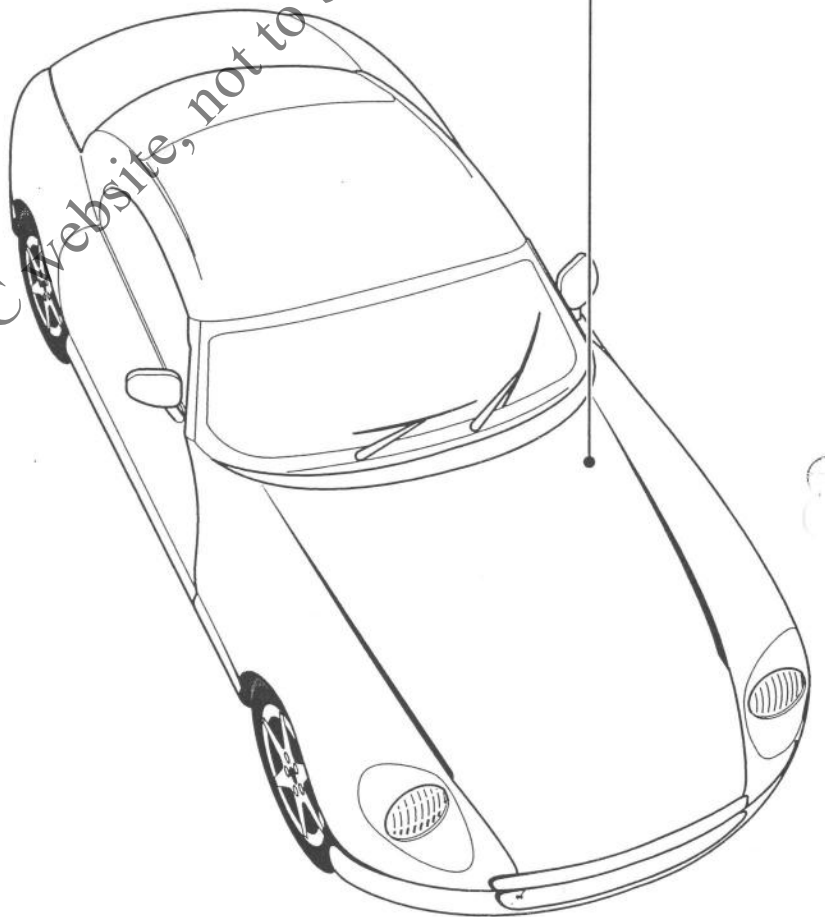

Downloaded free from the TVRCC website, not to be sold for commercial gain.

FRONT HARNESS MULTITWAY CONNECTIONS

J30 Multiway Connector

Location: Behind N/S
passenger seat

Connection: 36 way

J31 Multiway Connector

Location: Behind N/S
passenger seat

Connection: 24 way

J32 Multiway Connector


Location: Behind N/S
passenger seat

Connection: 19 way

J36 Alarm

Location: Behind rear
passenger seat

Connection: 2 x12 way

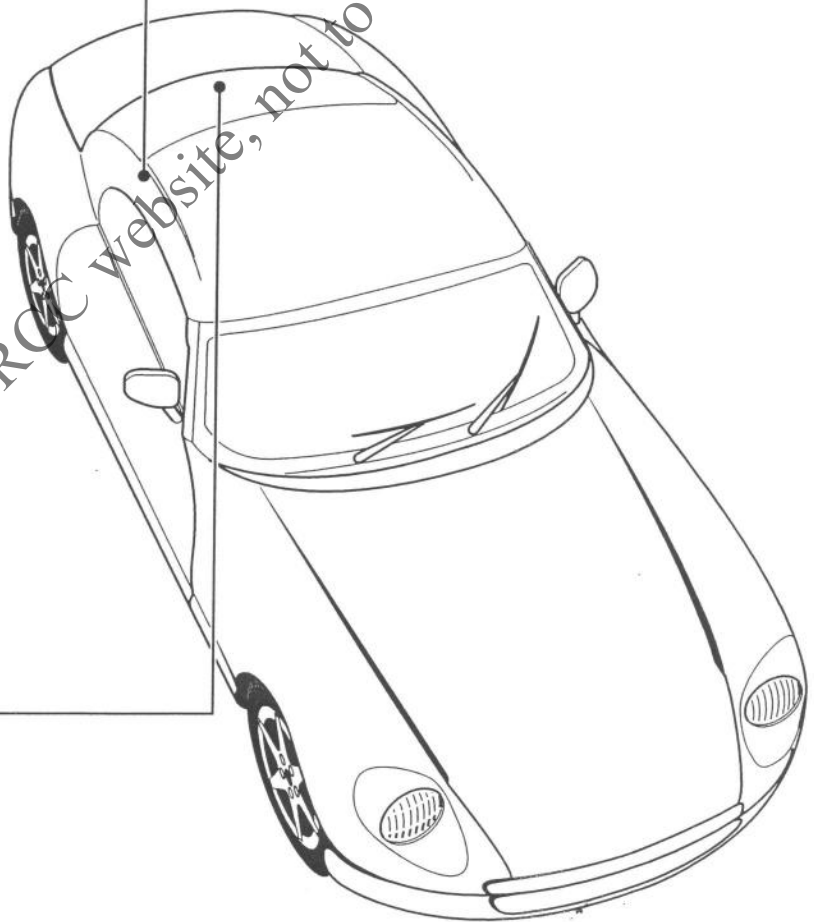

J37 Alarm Accessory Socket

Location: Behind rear passenger seat

Connection: 1 x 6 way

J38:A+B Boot Courtesy Lamp

Location: Behind rear slam panel

Connection: spade connectors

J39 Boot Lid


Location: Top of righthand side of boot

Connection: 5 way

J40:A+B Boot Lid Switch

Location: Side of boot

Connection: Eyelet to spade

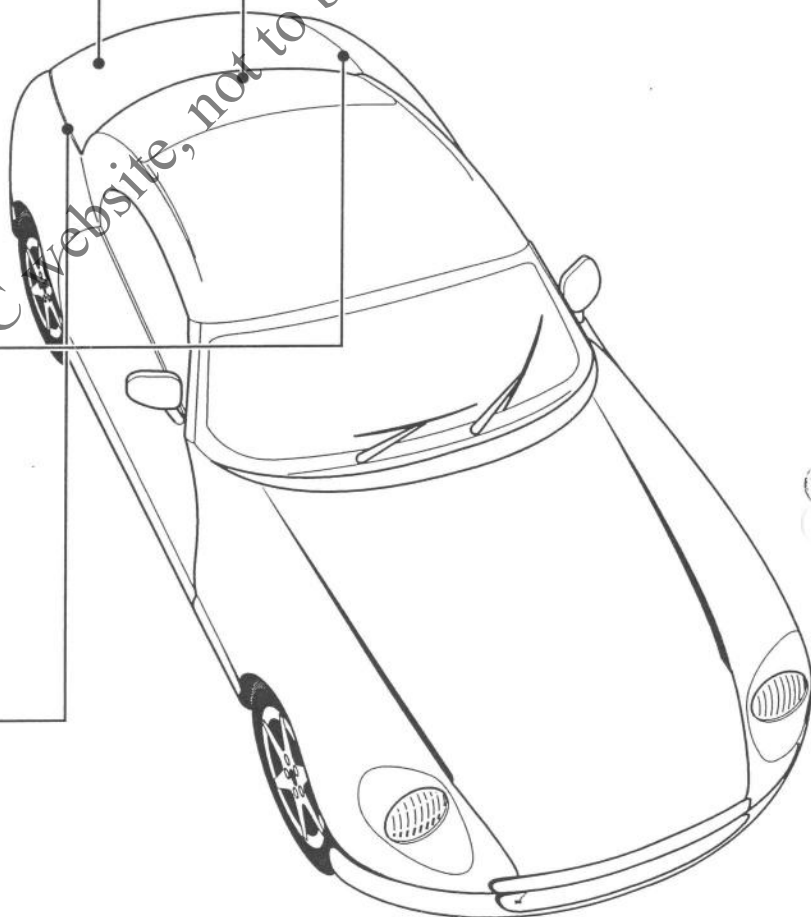

J41:A+B Boot Lock Solenoid

Location: Behind rear slam panel

Connection: spade

J42 Boot Release Switch

Location: Behind rear slam panel

Connection: 2 way

J43 Dim Dip Control Unit


Location: Top right handside of boot

Connection: 9 way

J44:A,B,C,D,E,F Dim Dip Unit

Location: Top Of Fuel Tank

Connection: 6 x spade

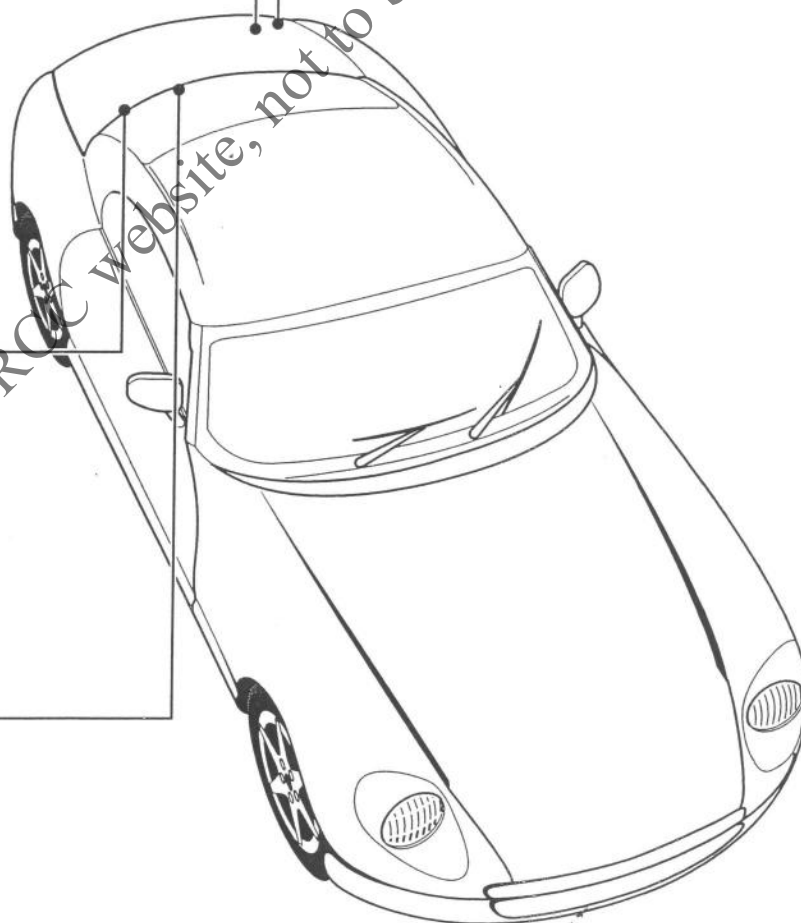

J45+46 Door Lock Control Unit

Location: Top of Tank
 Connection: 17 way + 2 way

J47+48 Door Lock Control Unit


Location: Top of Tank
 Connection: 9 way + 9 way

J49:A+B Driver's Door Lock Motor

Location: Next to drivers door lock
 Connection: spades

J50 Driver's Seat Belt

Location: Top of tunnel
 Connection: 2 way

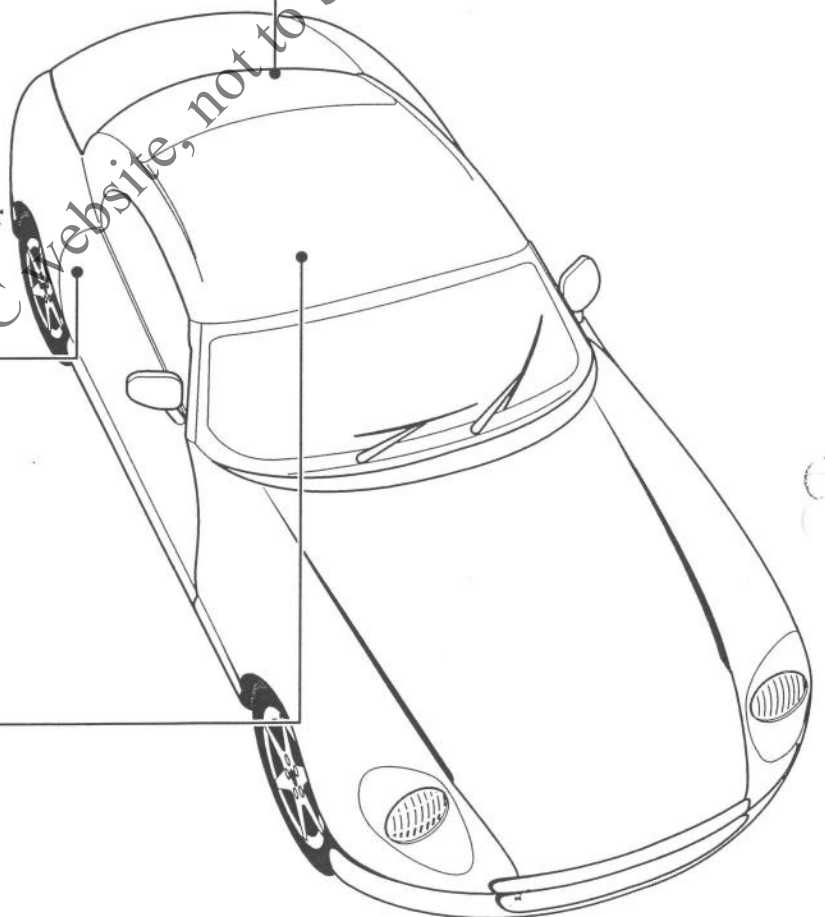

J51 Fuel level sender

Location: Top of Tank

Connection: 2 way sealed

J52:A+B Fuel Pump

Location: On chassis leg

Connection: 2 eyelet

J53 Ignition Control Unit


Location: Top of bank

Connection: 9 way

J54 Immobiliser

Location: Behind rear seats

Connection:

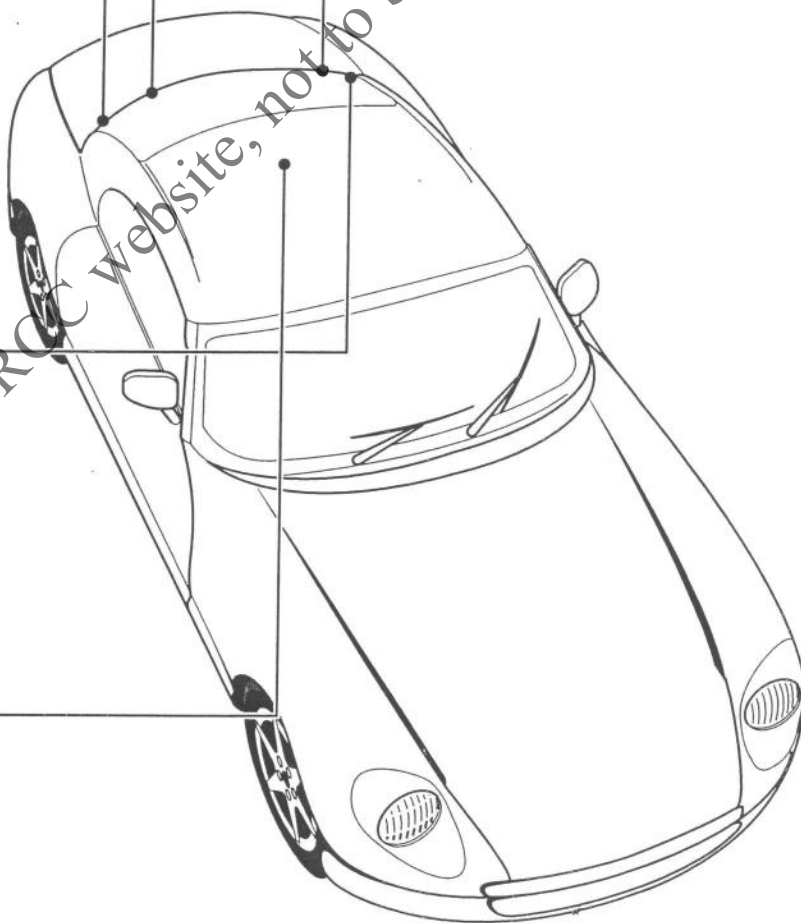

J55 Indicator Control Unit

Location: Top of tank

Connection: 17 way

J56 Inertia Switch

Location: Centre of tank

Connection: 3 way sealed

J57 Lights Control Unit


Location: Top of tank

Connection: 3 way

J58:A+B J59:A+B Number Plate lamps

Location: Behind number plate

Connection: 3 way

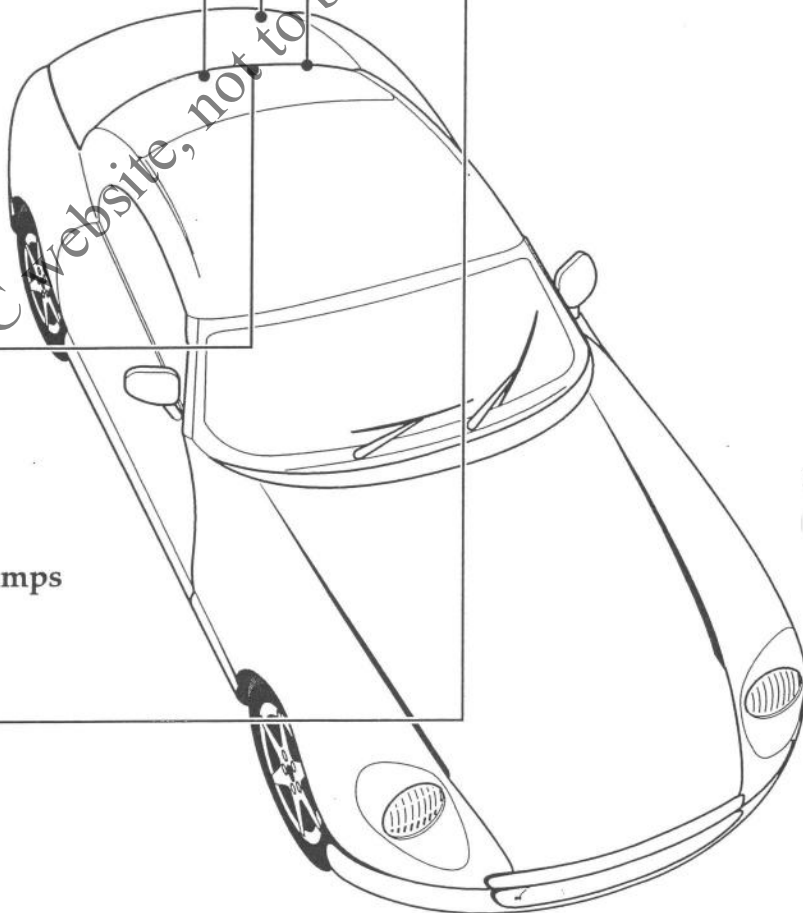

Downloaded free from the TVRCC website, not to be sold for commercial gain.

J60:A+B Passenger Door Lock Motor

Location: L/R of rear window

Connection:

J61 Purge Valve

Location: Inside of passenger wheel arch

Connection:

J62:A+B Rear Speaker


Location: Behind rear lights

Connection: 5 way

J63:A+B Rear Speaker

Location: Behind rear lights

Connection: 5 way

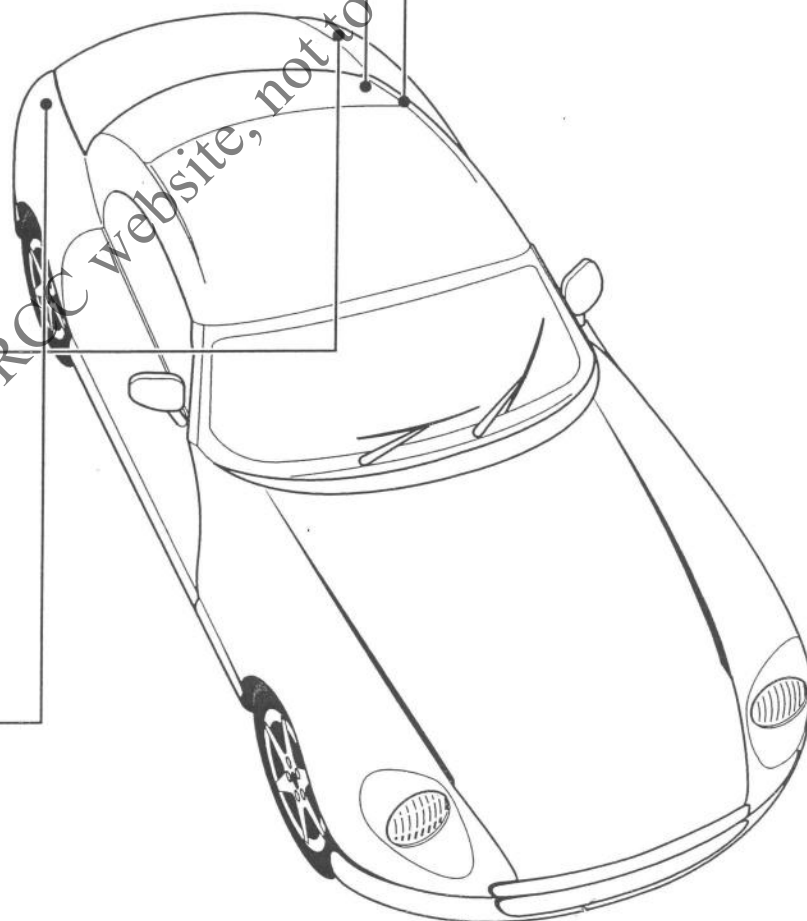

J64:A+B Rear Window

Location: Top of the passenger footwell.

Connection: 2 way

J65 Rear lamp Cluster (Left)

Location: Top of the passenger footwell.

Connection: 2 way

J66 Rear lamp Cluster (Right)


Location: Top of the passenger footwell.

Connection: 2 way

J67 Speedo Speed Sensor

Location: Top of the passenger footwell.

Connection: 2 way

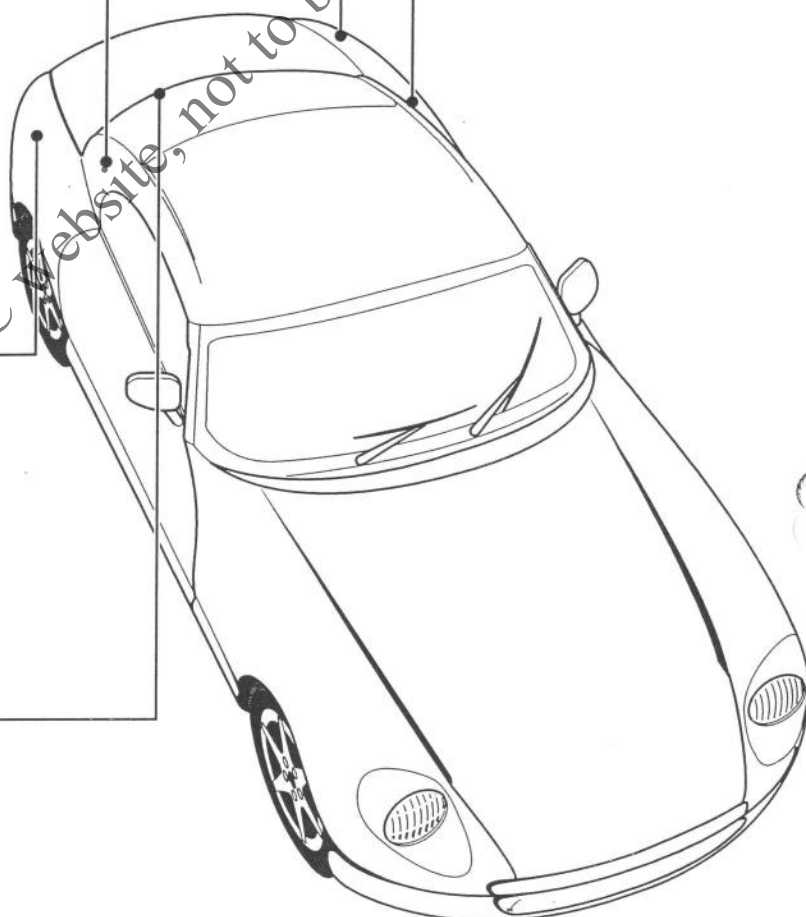

REAR MULTIWAY HARNESS CONNECTORS

J33 Multiway Connector


Location: Behind drivers seat
Connection: 36 way

J34 Multiway Connector

Location: Behind drivers seat
Connection: 24 way

J35 Multiway Connector

Location: Behind drivers seat
Connection: 19 way

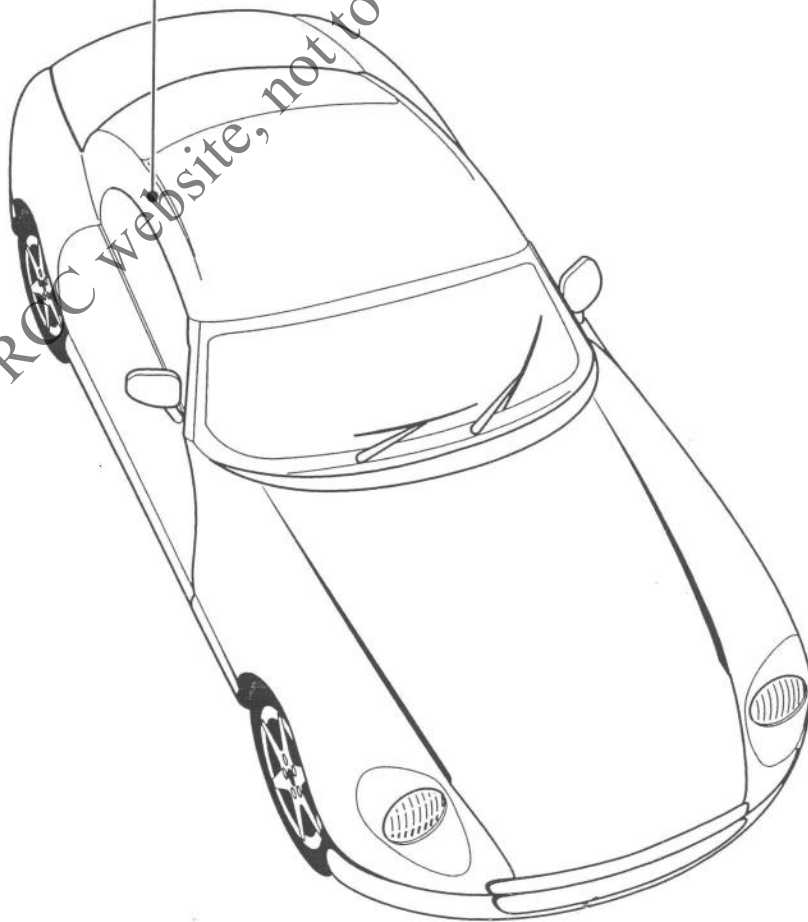

REAR HARNESS FUSEBOARD CONNECTORS

J68 Fuseboard Block A

Location: Top of the passenger footwell.

Connection: 2 way

J69 Fuseboard Block B

Location: Top of the passenger footwell.

Connection: 2 way

J70 Fuseboard Block C


Location: Top of the passenger footwell.

Connection: 2 way

J71 Fuseboard Block D

Location: Top of the passenger footwell.

Connection: 2 way

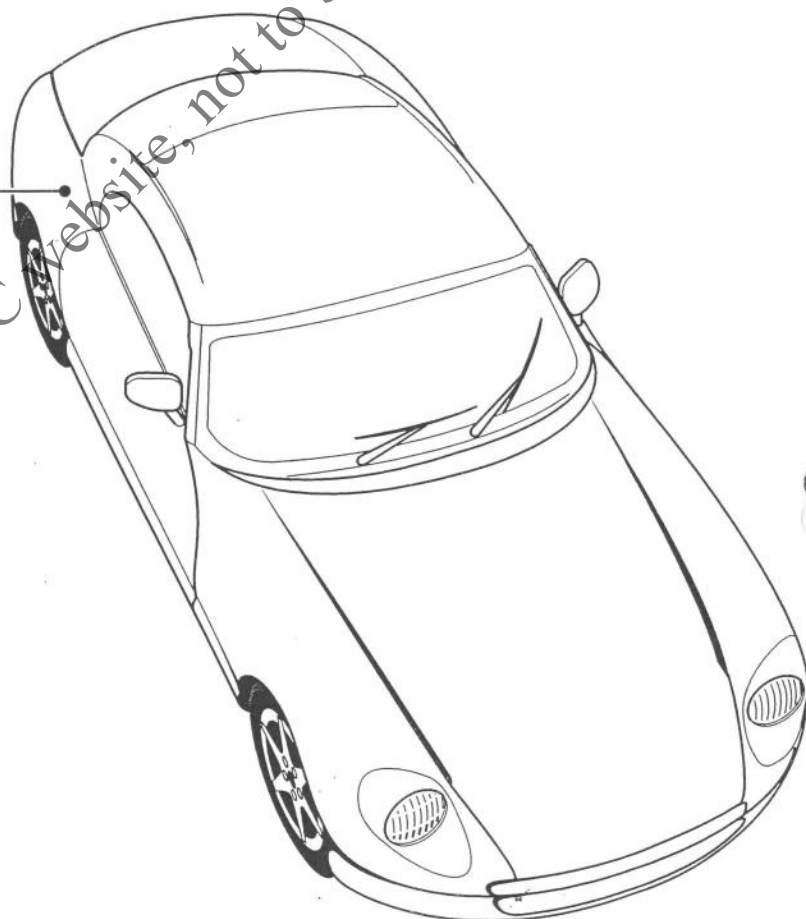

Downloaded free from the TVRCC website, not to be sold for commercial gain.

J72 Fuseboard Block E

Location: Top of the passenger footwell.

Connection: 2 way

J73 Fuseboard Block F

Location: Top of the passenger footwell.

Connection: 2 way

J74 Fuseboard Block G


Location: Top of the passenger footwell.

Connection: 2 way

J75 Fuseboard Block H

Location: Top of the passenger footwell.

Connection: 2 way

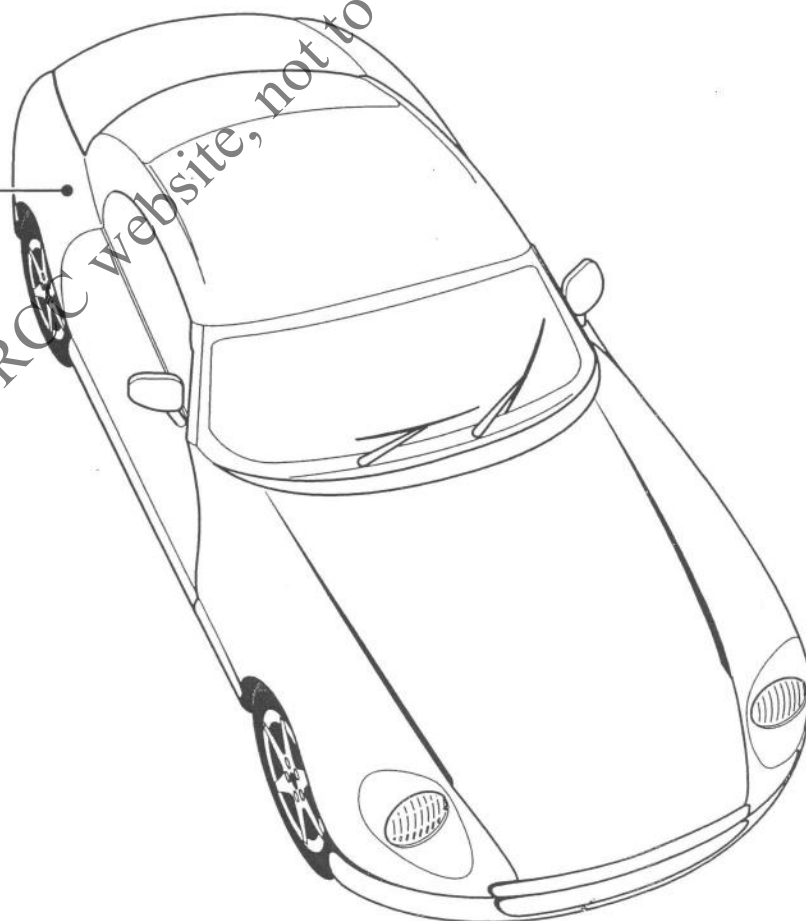

J76 Fuseboard Block I

Location: Top of the passenger footwell.
Connection: 2 way

J77 Fuseboard Block J


Location: Top of the passenger footwell.
Connection: 2 way

J78 Fuseboard Block K

Location: Top of the passenger footwell.
Connection: 2 way

J79: A,B,C,D Fuseboard Block L

Location: Top of the passenger footwell.
Connection: 2 way

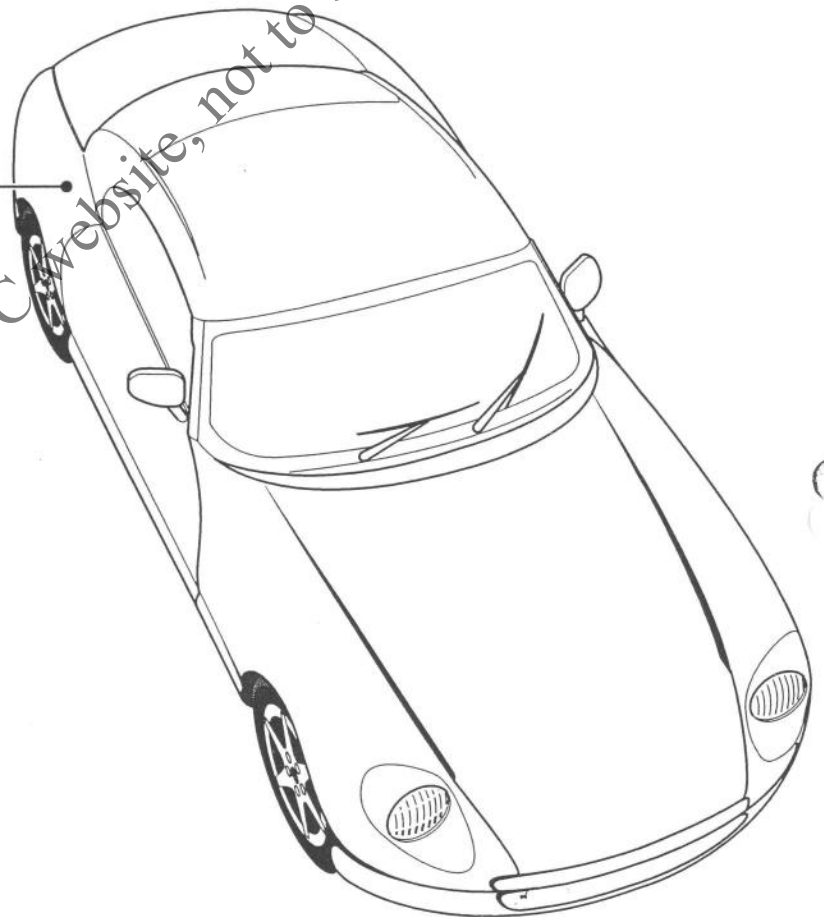

Downloaded free from the TVRCC website, not to be sold for commercial gain.

J80:A+B Fuseboard Block M

Internal Light Switch

Location: Top of the passenger footwell.

Connection: 2 way

Colour of wires: Purple & Red

J81 Fuseboard Block P

Internal Light Switch

Location: Top of the passenger footwell.

Connection: 2 way

Colour of wires: Purple & Red

J82 Fuseboard Block R

Internal Light Switch

Location: Top of the passenger footwell.

Connection: 2 way

Colour of wires: Purple & Red

