



- | | | | | | |
|----|--|----|----------------------------------|----|-----------------------------|
| 1 | Main beam fuse 25 amp. | 19 | Right-hand main beam. | 39 | Window switch right-hand. |
| 2 | Dip beam fuse 25 amp. | 20 | Right-hand dip beam. | 40 | Headlamp motors relay. |
| 3 | Side tail and panel fuse 10 amp. | 21 | Right-hand side light front. | 41 | Dip switch. |
| 4 | Window lift left-hand fuse 25 amp. | 22 | Left-hand side light front. | 42 | Flasher unit. |
| 5 | Window lift right-hand fuse 25 amp. | 23 | Dip beam left-hand. | 43 | Indicator switch. |
| 6 | Hazard and interior lights fuse 16 amp. | 24 | Main beam left-hand. | 44 | Ignition switch. |
| 7 | Headlamp motor left-hand fuse 25 amp. | 25 | Left-hand indicator front. | 45 | Hazard warning switch. |
| 8 | Headlamp motor right-hand fuse 25 amp. | 26 | Alternator. | 46 | Electric fuel pump. |
| 9 | Headlamp flash and horns fuse 16 amp. | 27 | Starter relay. | 47 | Safety switch — air sensor. |
| 10 | Heater motors and D.L. fuse 25 amp. | 28 | Horn relay. | 48 | Cold start valve. |
| 11 | Wiper motor and washer fuse 25 amp. | 29 | Horn button. | 49 | Thermotime switch. |
| 12 | Reversing lights, warning lights, brake lights and instrument fuse 10 amp. | 30 | Headlamp motor right-hand. | 50 | Warm up regulator. |
| 13 | Battery. | 31 | Headlamp motor left-hand. | 51 | Auxiliary air device. |
| 14 | Starter solenoid. | 32 | Window lift right-hand. | 52 | Panel light switch. |
| 15 | Starter motor. | 33 | Window lift left-hand. | 53 | Courtesy light switch. |
| 16 | Low tone horn. | 34 | Headlamp flasher unit. | 54 | Rear fog lamp switch. |
| 17 | High tone horn. | 35 | Hazard flasher unit. | 55 | Main control relay. |
| 18 | Right-hand indicator front. | 36 | Headlamp motor relay right-hand. | 56 | Fan switch. |
| | | 37 | Headlamp motor relay left-hand. | 57 | Power supply relay. |
| | | 38 | Window switch left-hand. | | |